 



# Quick User Guide

## Accessories


### Standard accessories

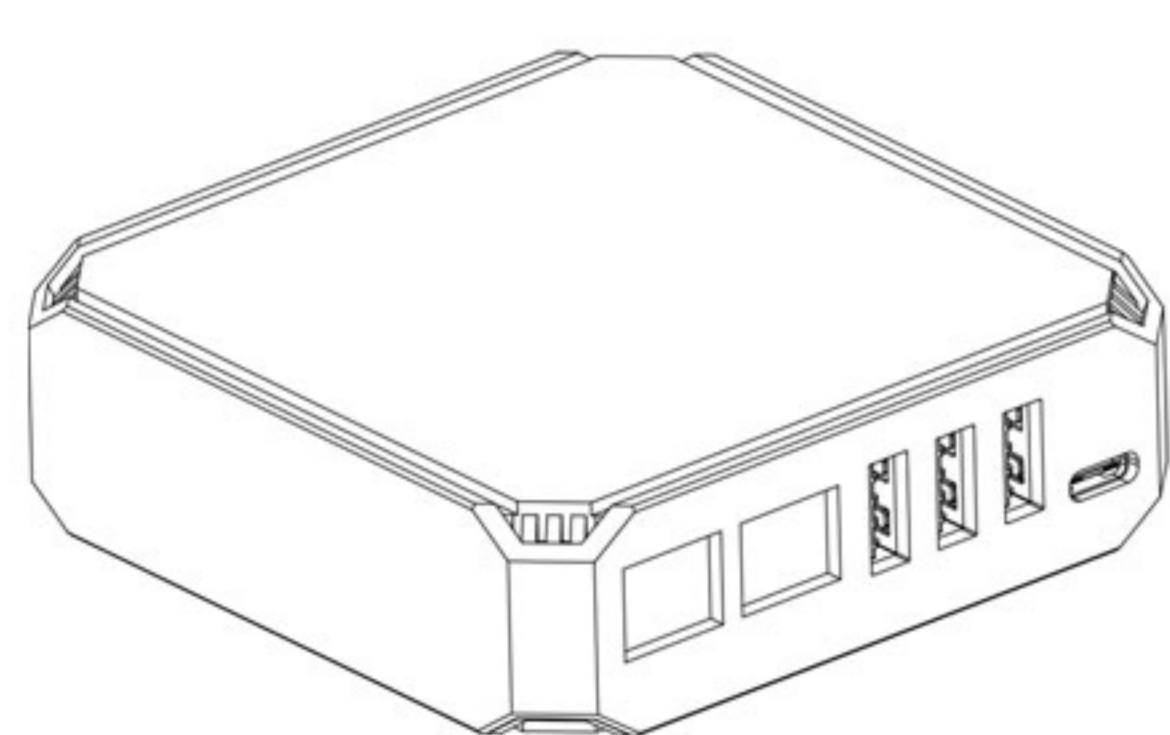

 3 USB ports print server

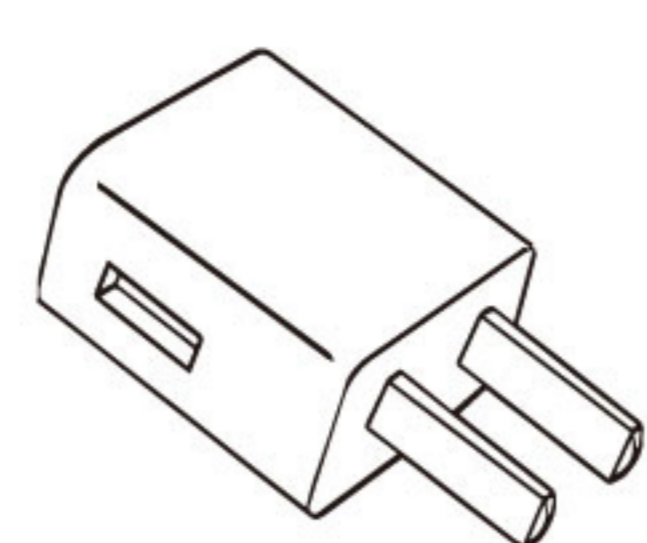


5V power adapter

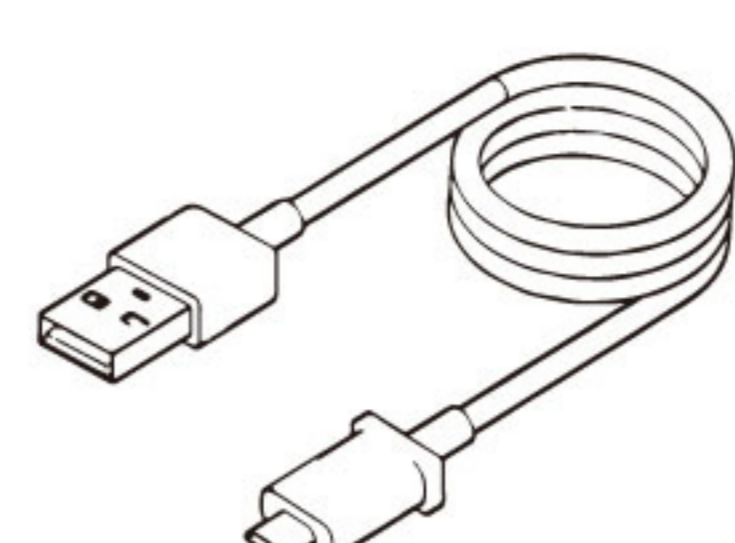 


Type-c data cable

## 1 Status Indication

 1. Bluetooth Status
2. Printer Status
3. Network Status
4. Power Status

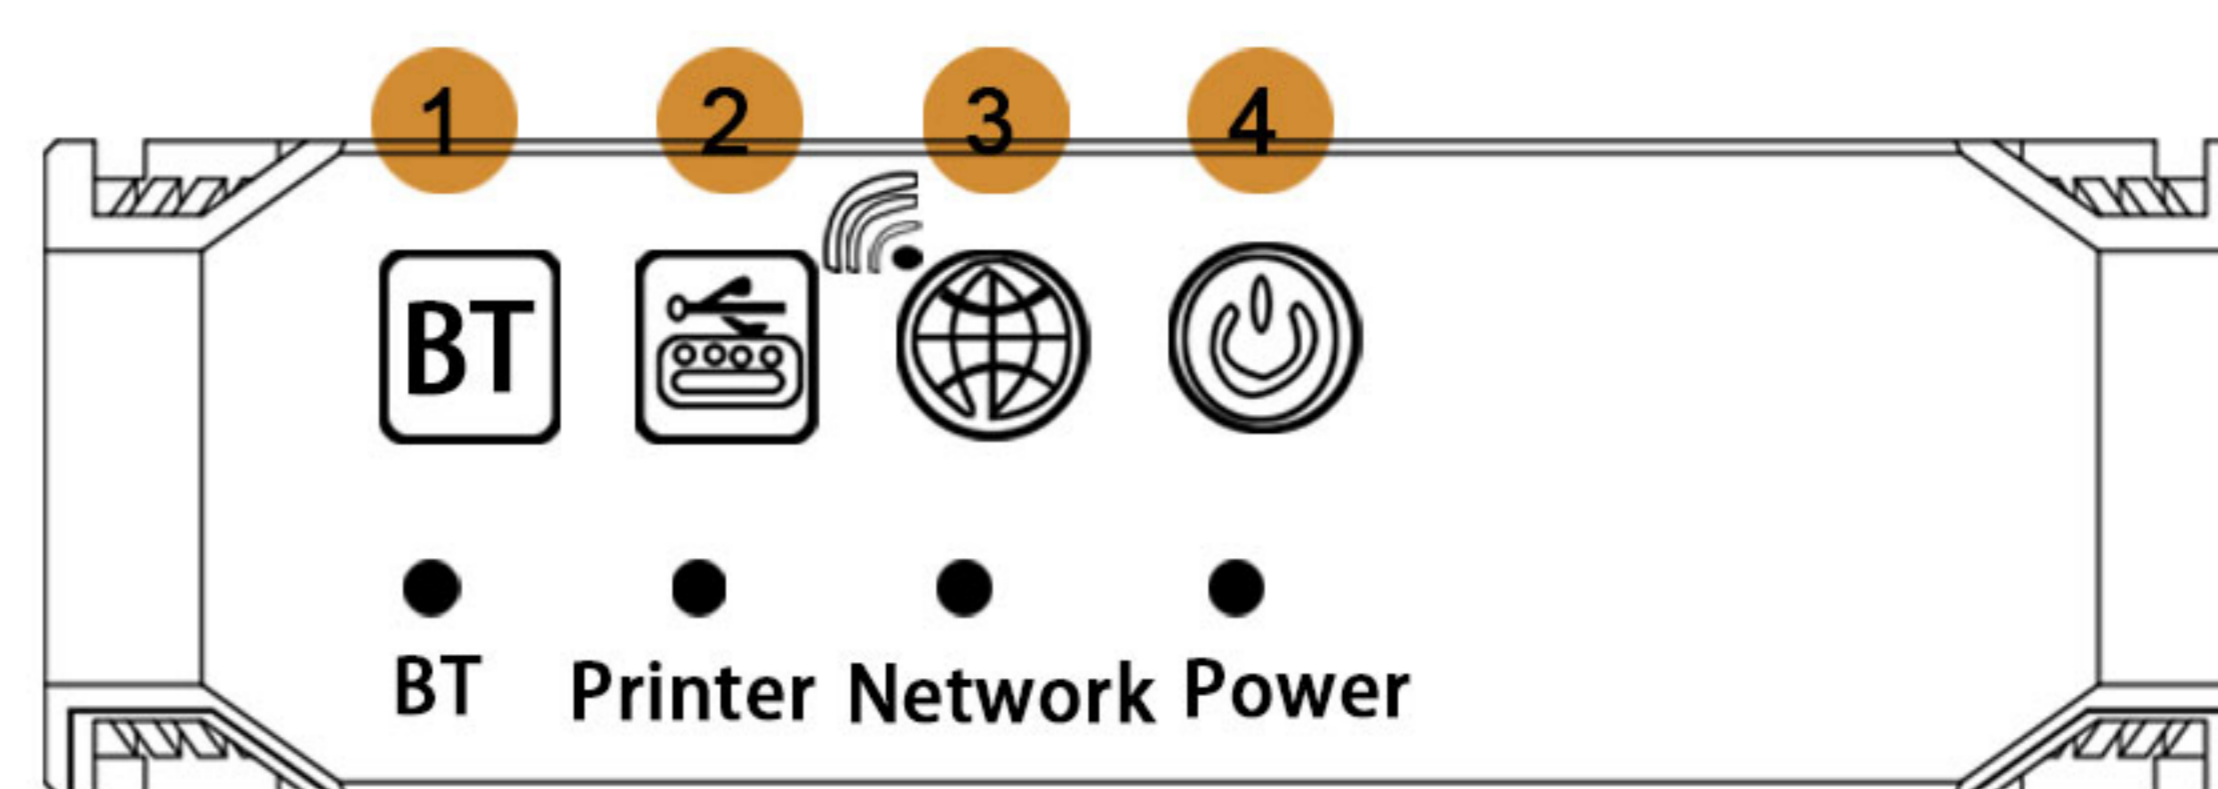

## Interface Description

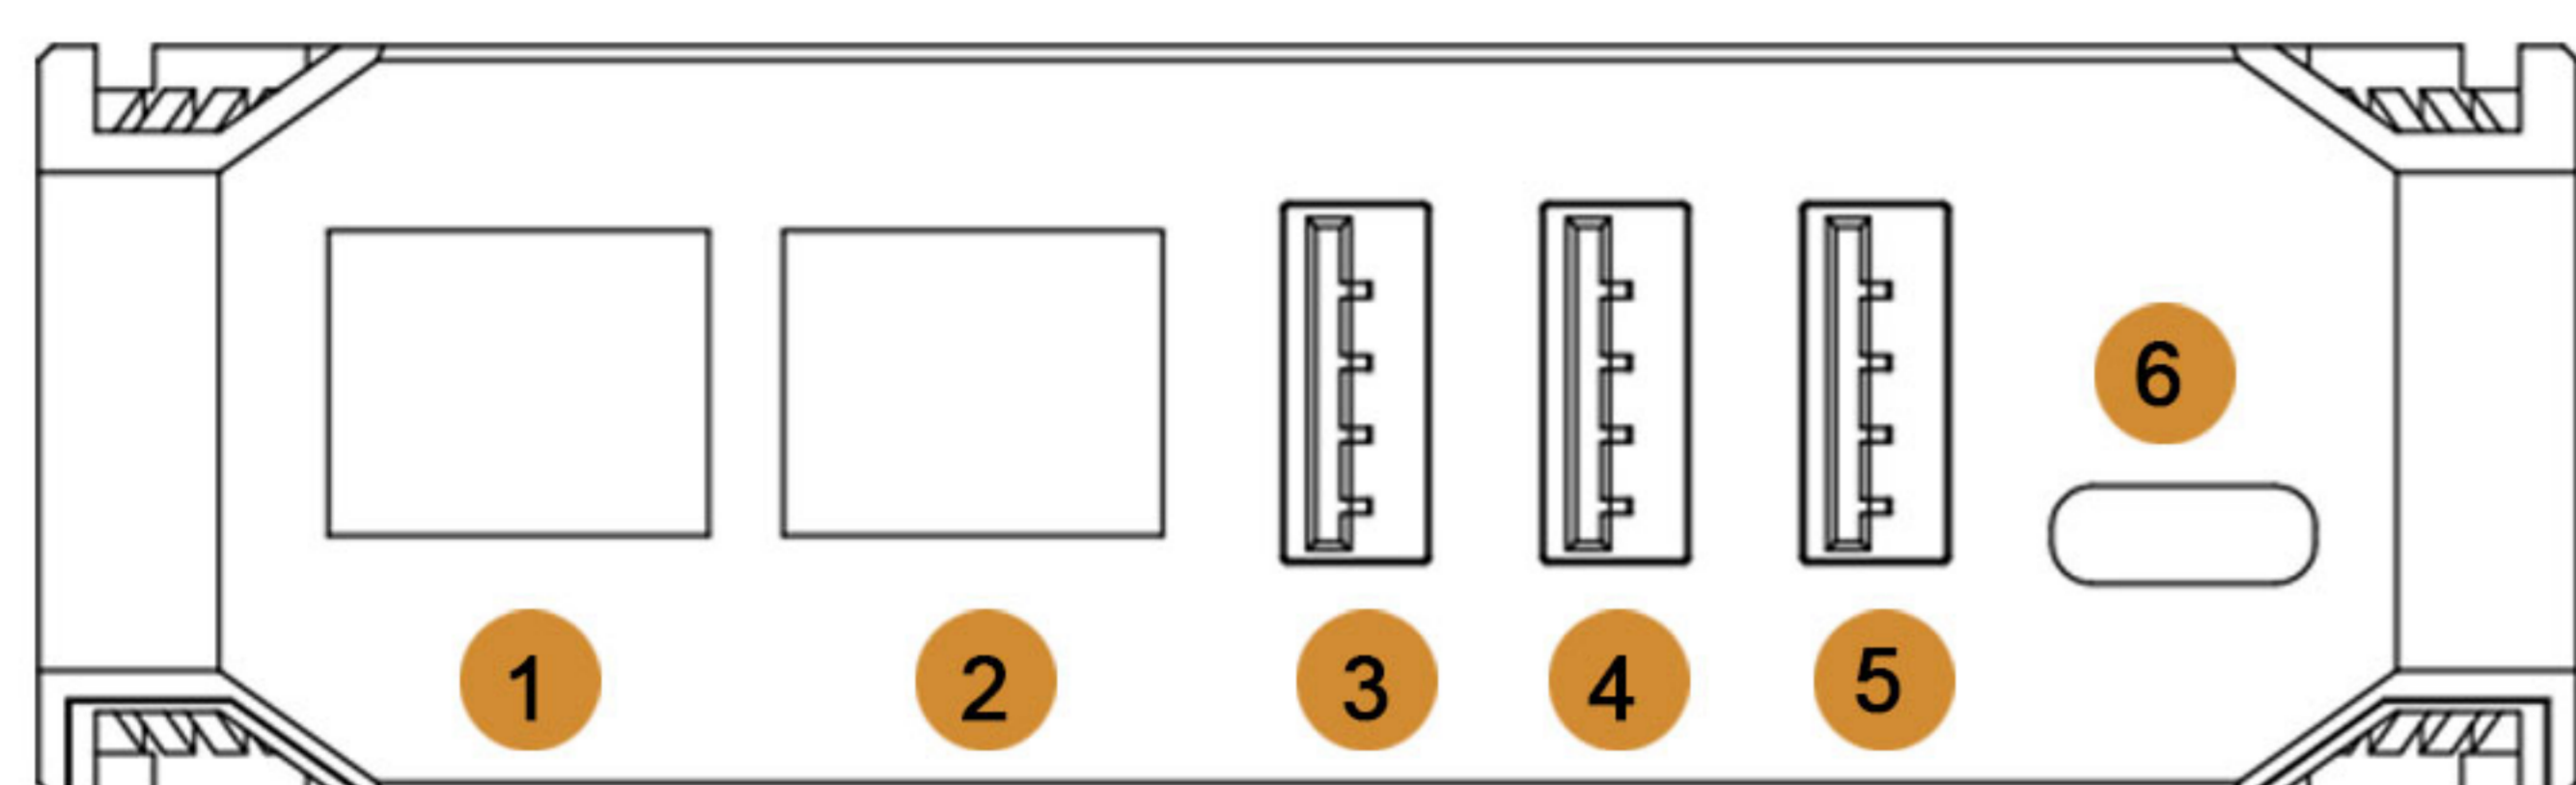 

1. Ethernet 1
2. Ethernet 0
3. USB 03 For Printer3

4. USB 02 For Printer2
5. USB 01 For Printer1
6. Power/Configuration Interface

## 2 Config Tool Download

 


Scan the QR code or visit the following link to download the device config tool and user manual:

Download link: <https://loyalty-secutech.com/wb06-print-server-documents/>


## 3 Config Tool Interface (Wired)

1. Connect the print server to the computer via USB cable, assign a valid IP address for it.
2. Reboot the print server, and connect it to the router via RJ45 cable.

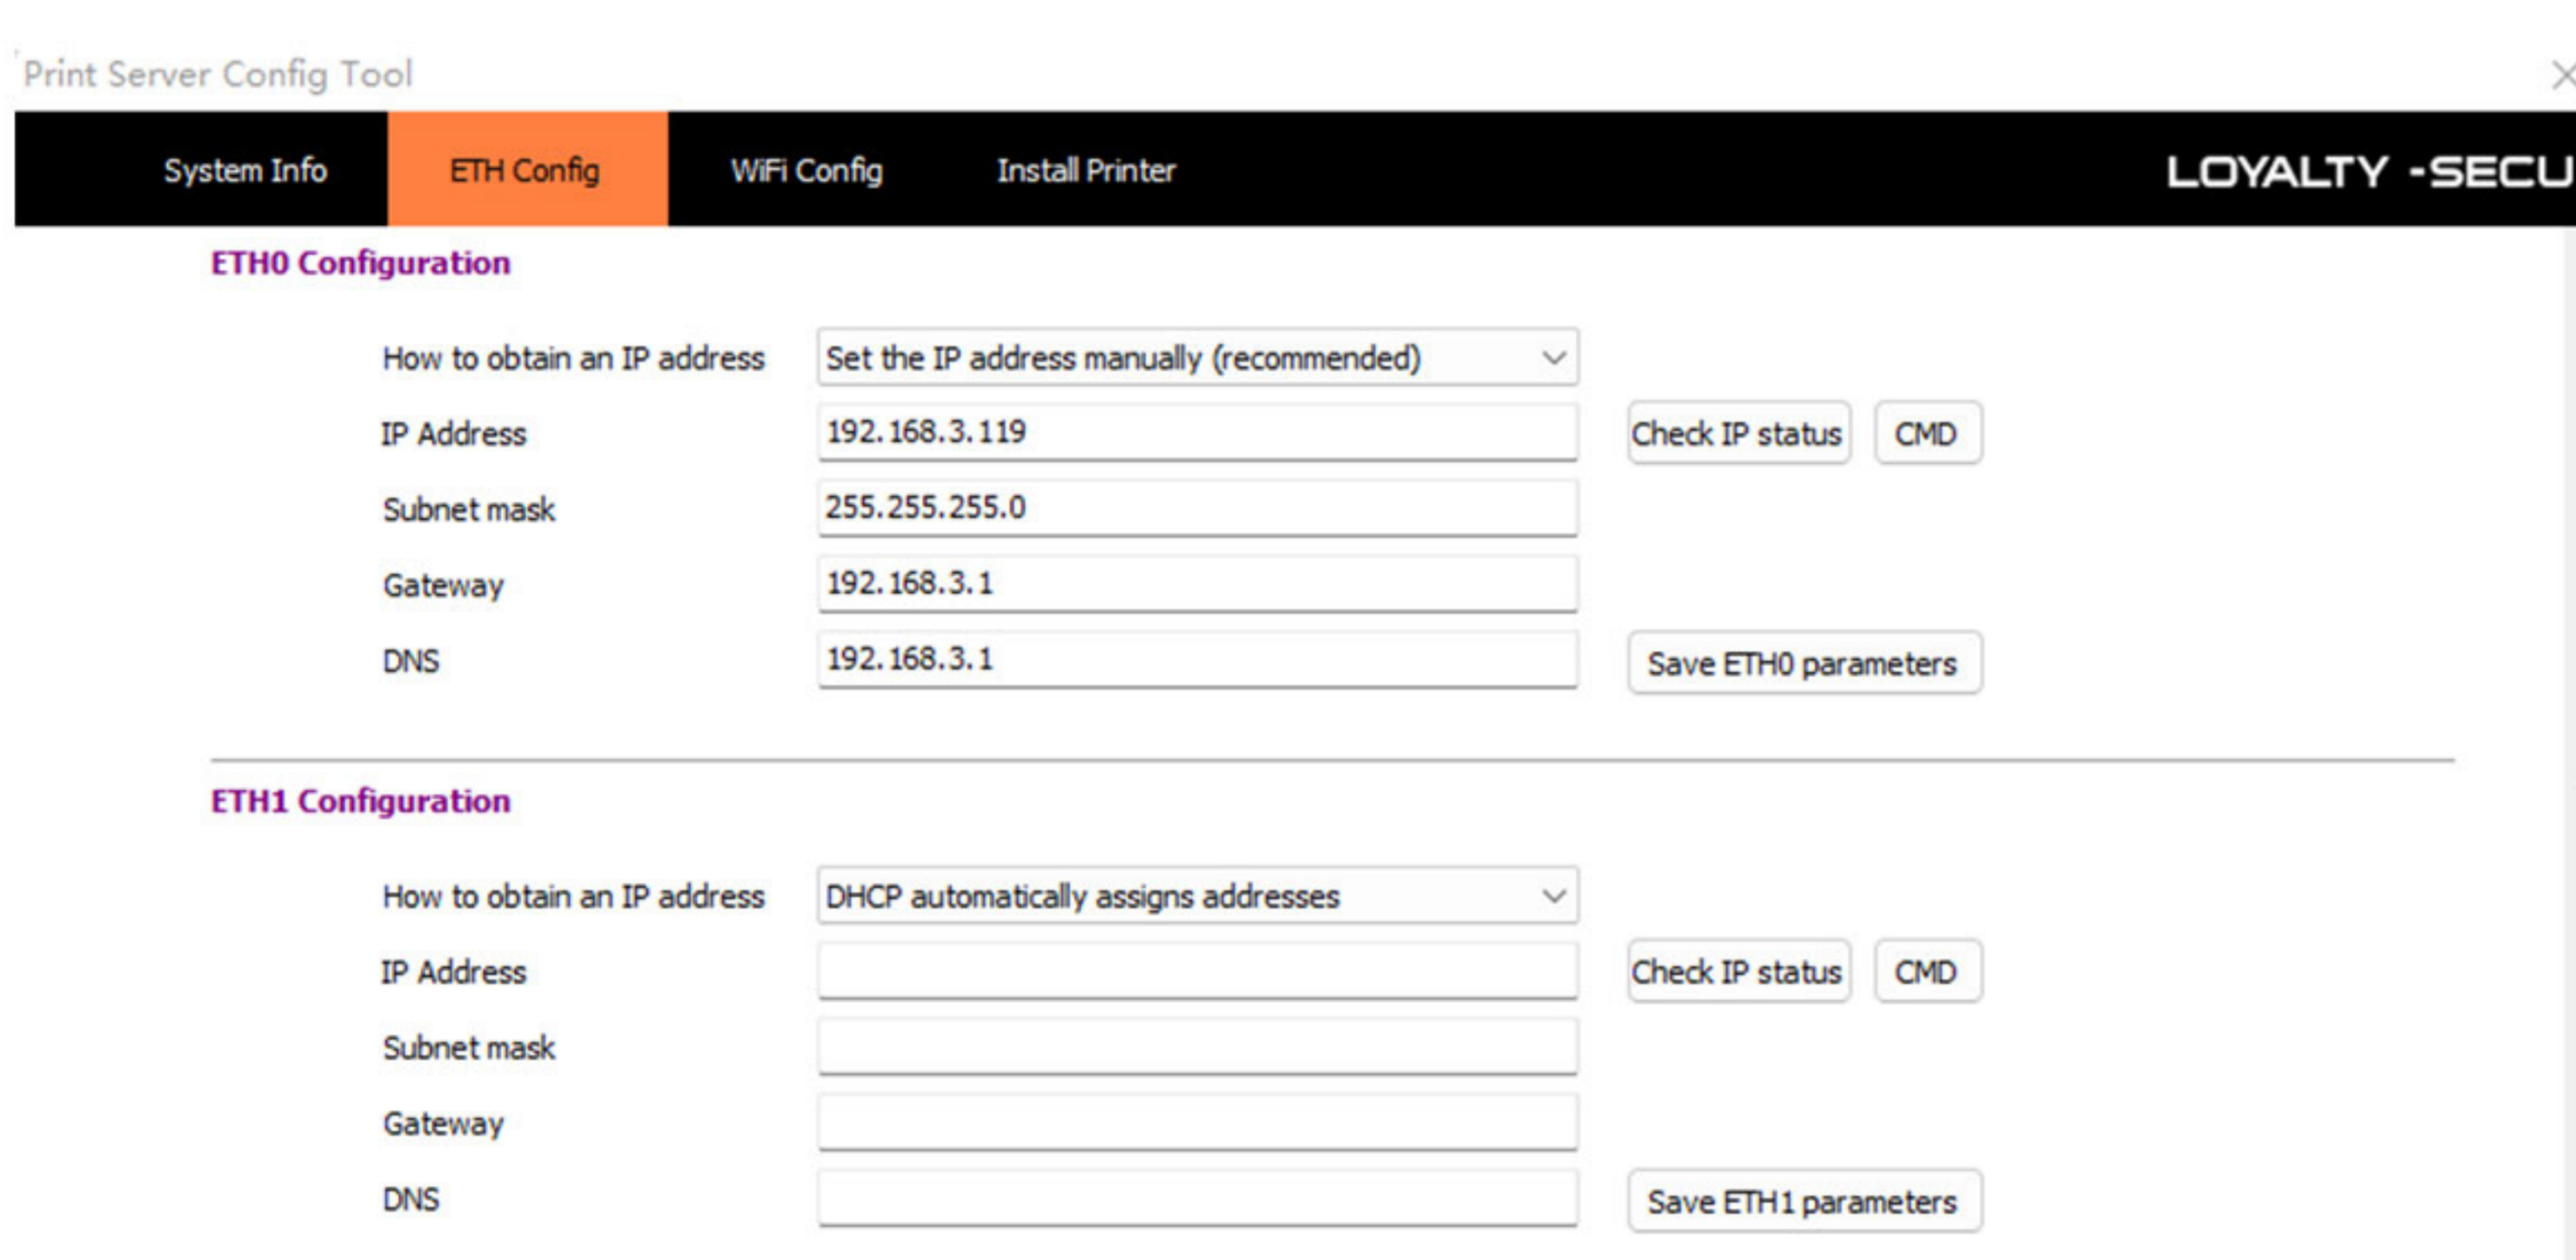


## 4 Config Tool Interface (WiFi)

 1. Connect the print server to the computer via USB cable.
2. Scan nearby WiFi, assign a valid IP address for the print server, and connect the print server to the router.

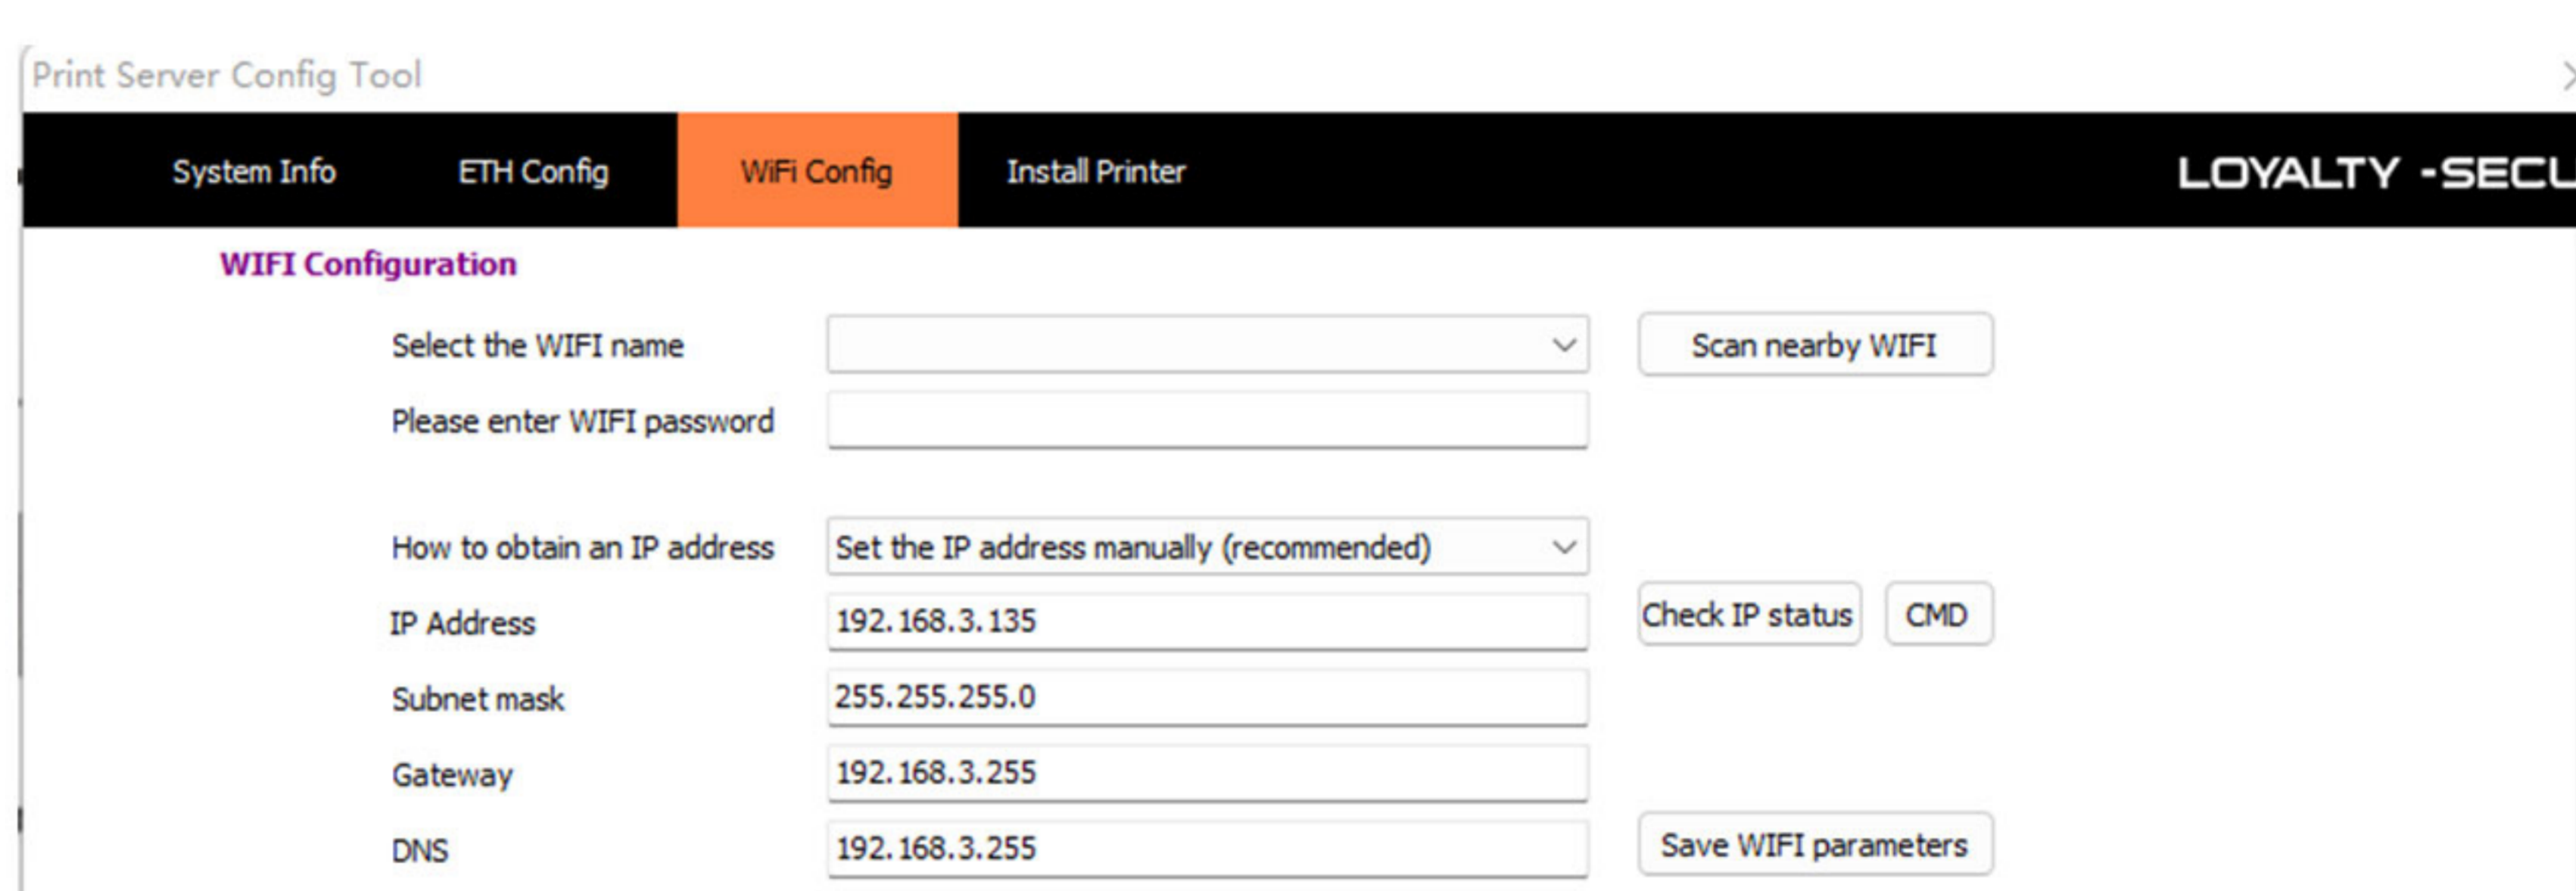

## 5 Install Printer

 Click "Open the printer installation wizard" to install the printers

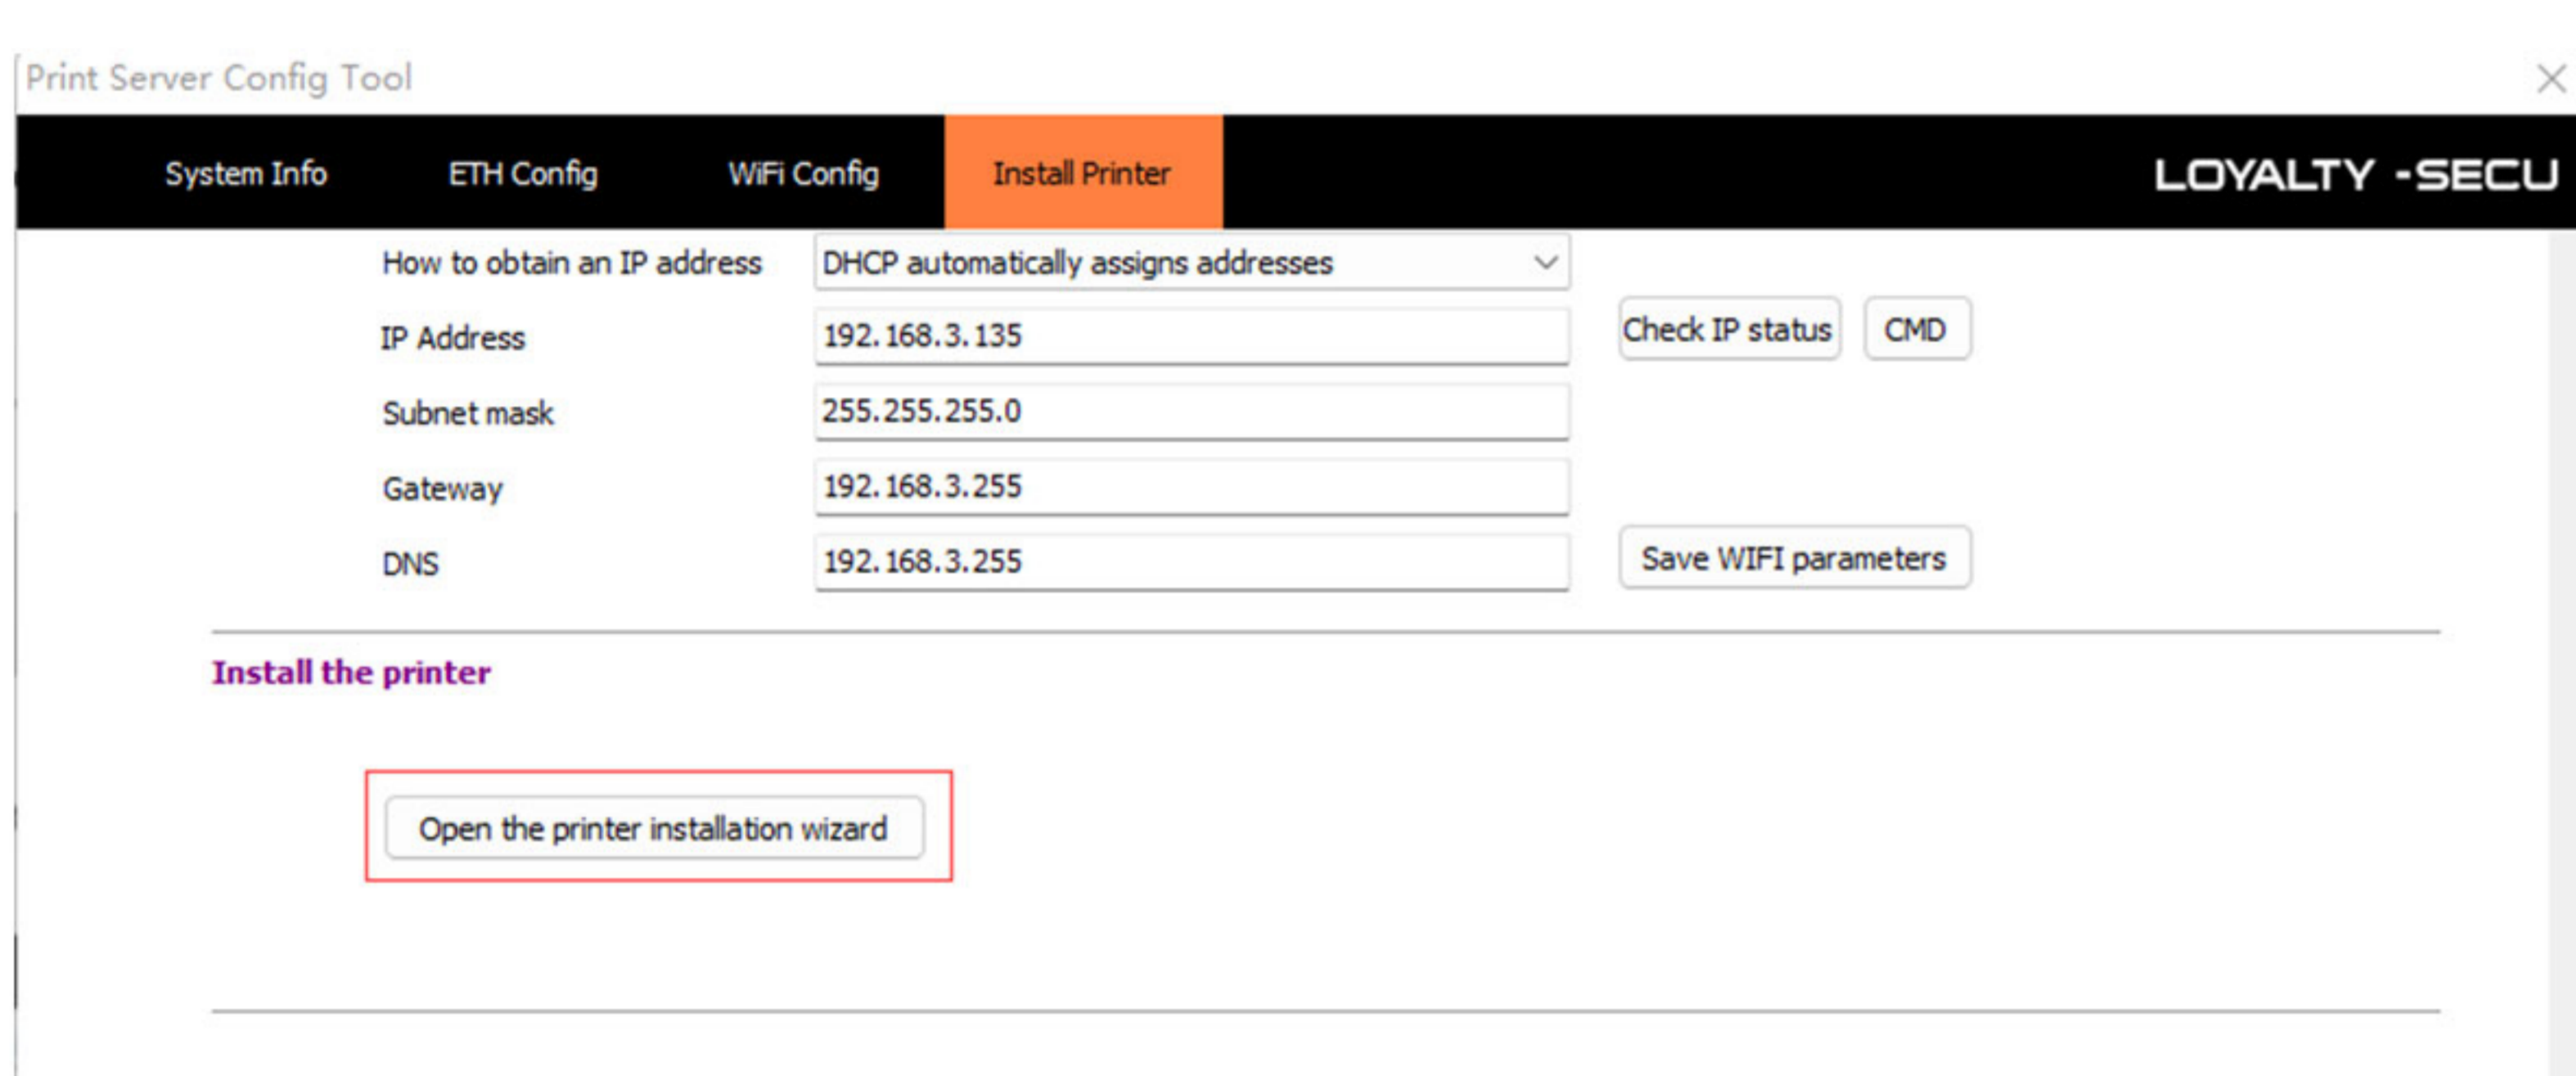

## 6 Computer Printing (Win/Mac)

 
Print server configuration is supported only on Windows OS.

Windows 2000/2003/XP/Vista/7/8/10/11



Install the printer driver on the computer.  
Add a standard TCP/IP port in the printer port.  
Port number: USB 01-9100, USB 02-9101, USB 03-9102


## 7 APP Download (Android)

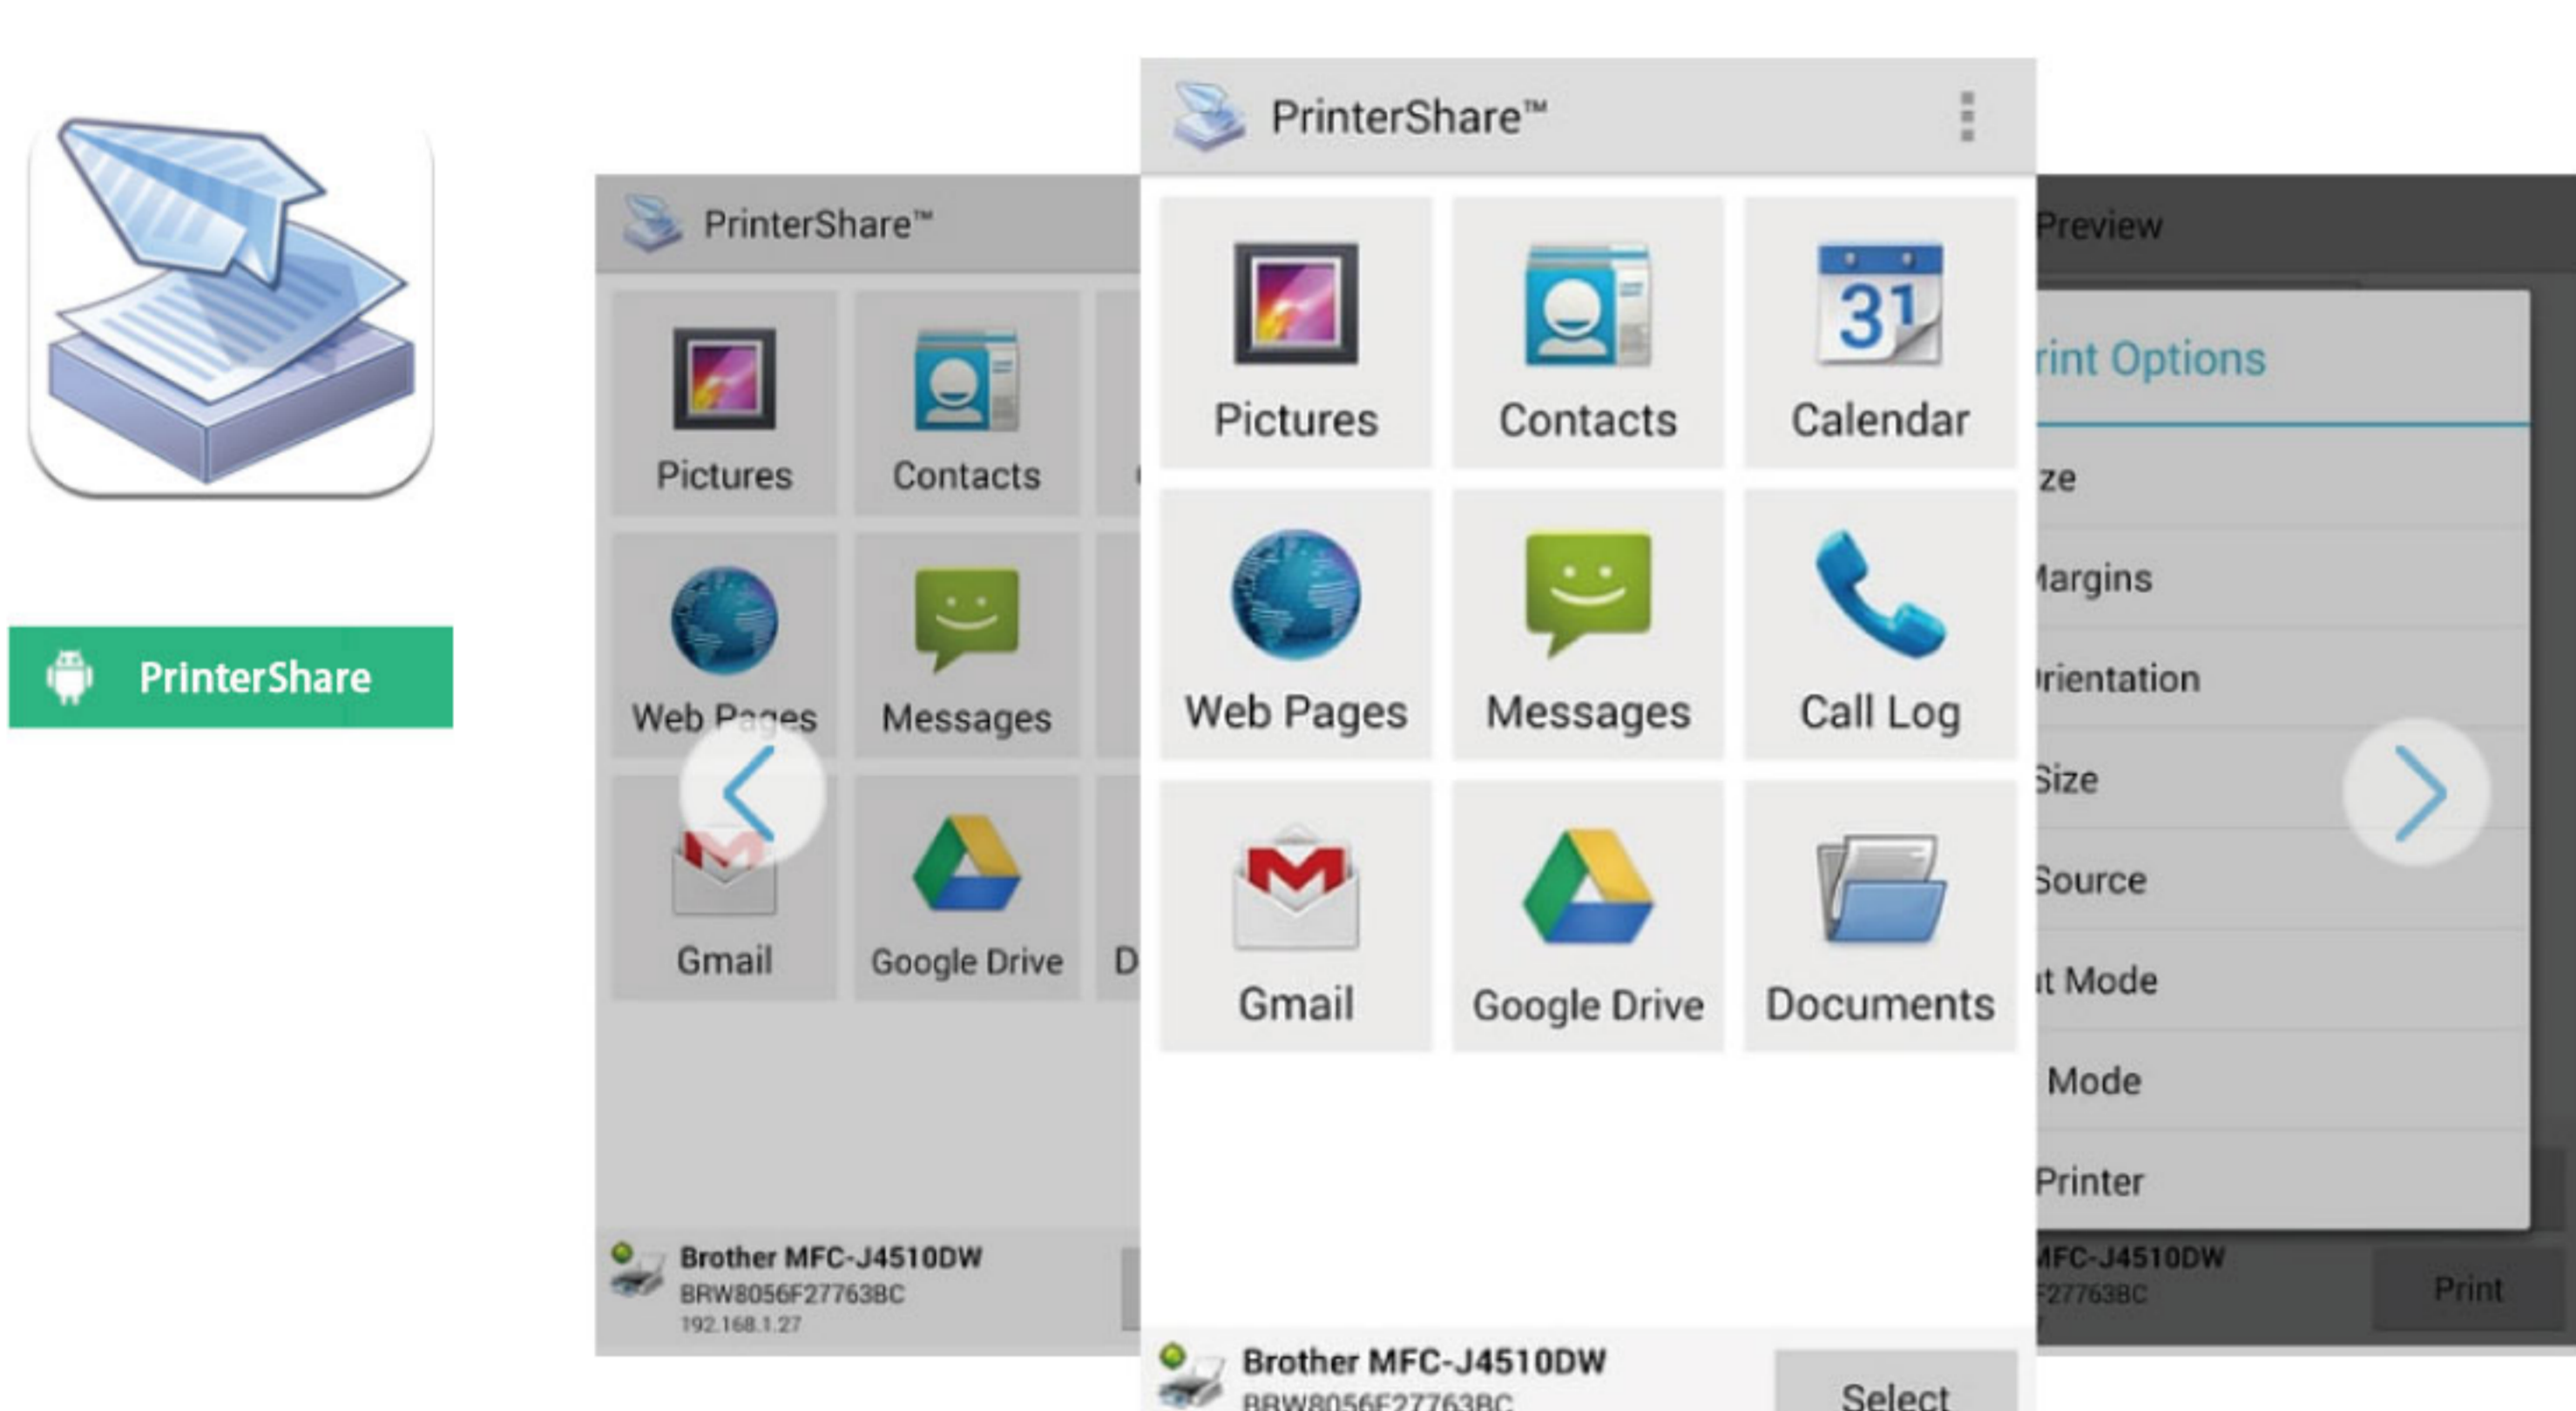

Download the "PrinterShare" or "PrintHand" app from Google Play.


## 8 Bluetooth Printing

 To use Bluetooth Print Server printing:

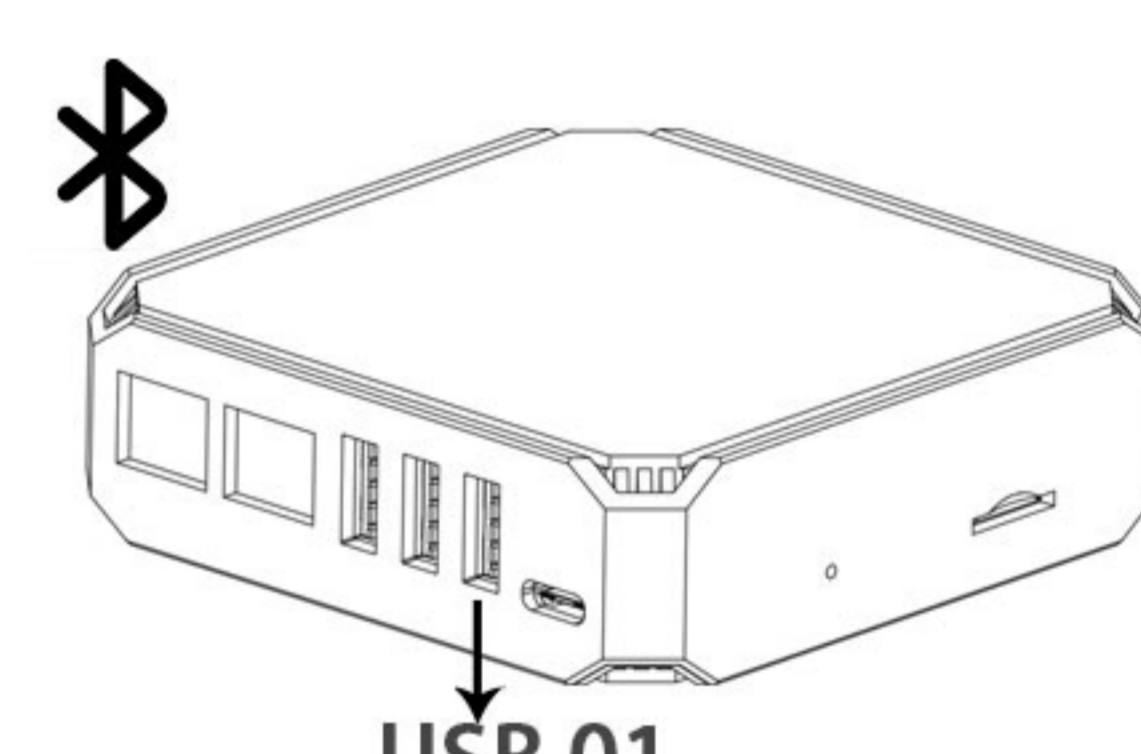

1. Connect the printer to USB 01 Port of the print server.
2. Turn on the Bluetooth of your computer, pair with the Bluetooth print server (no pin code required)
3. Obtain the Bluetooth networking COM number of the print server and assign it to the USB printer.

## 9 Workflow

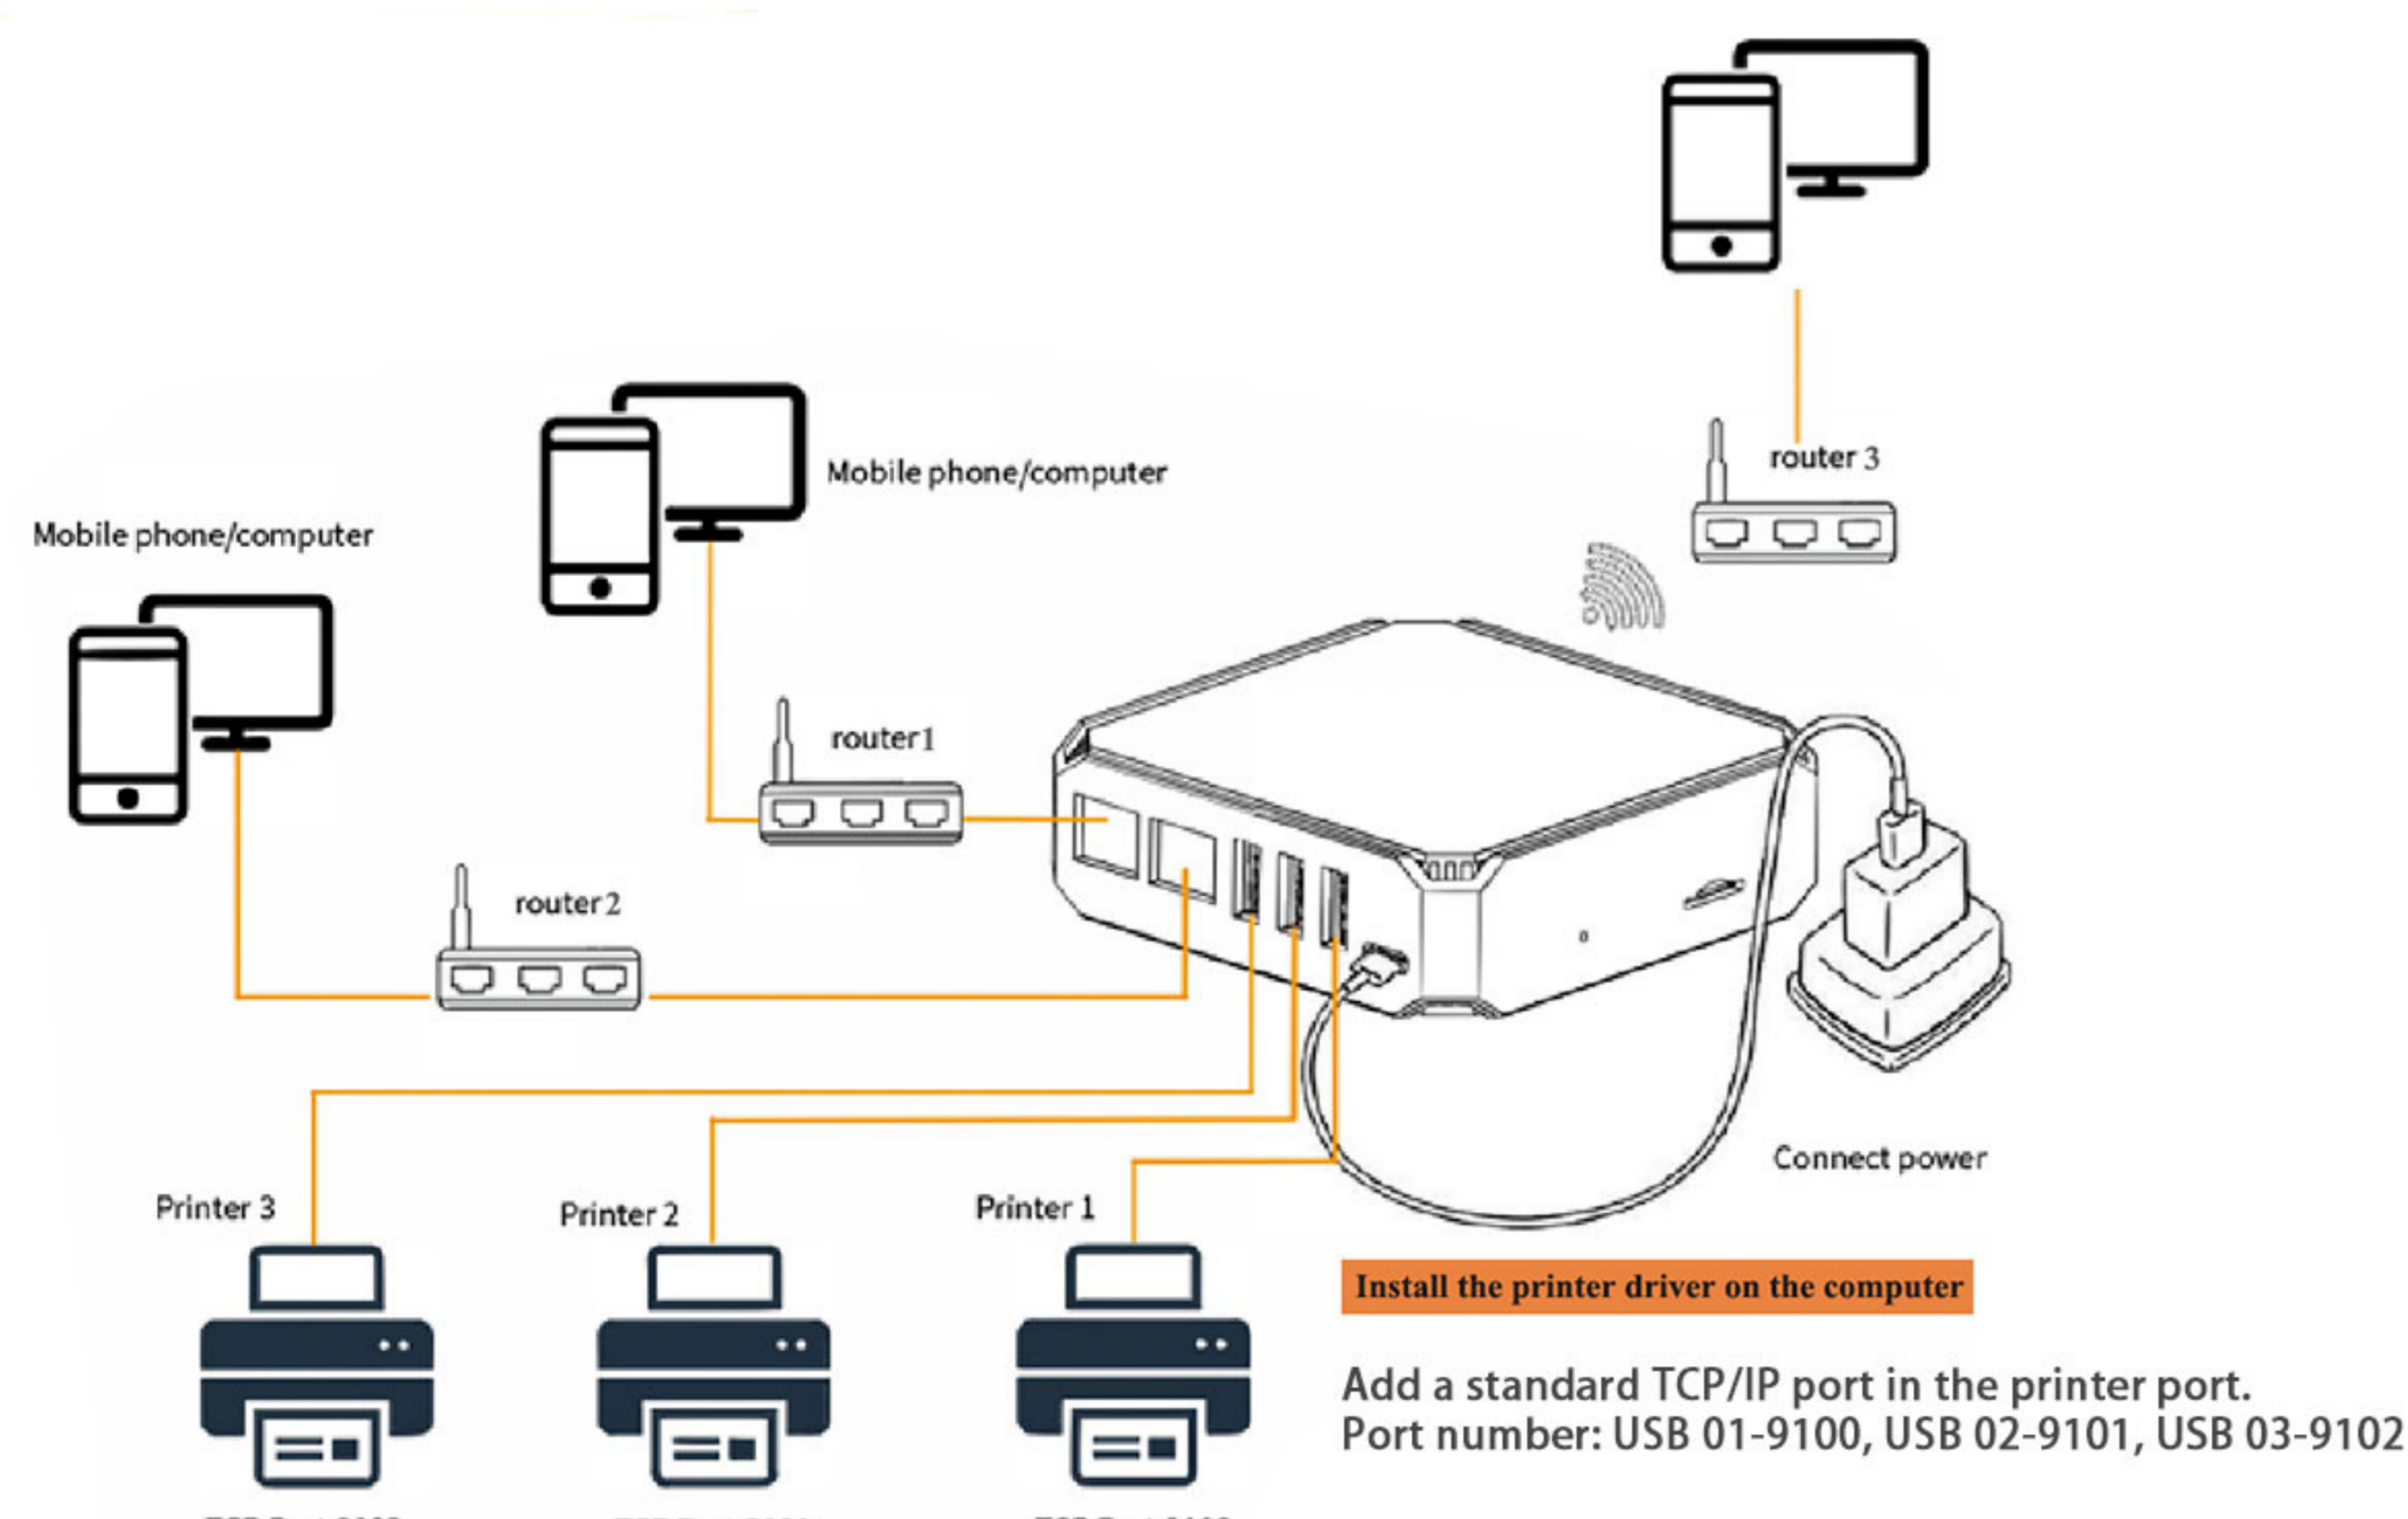 

## 10 Setting Demo Video



Demo video: <https://loyalty-secutech.com/video/>

Making Print Sharing Easy and Free!

Shenzhen LOYALTY-SECU Technology Co., LTD

LOYALTY -SECU

[www.loyalty-secutech.com](http://www.loyalty-secutech.com)