



Quick User Guide

Accessories

Standard accessories

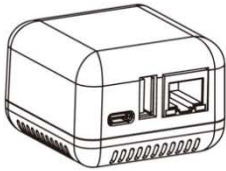

 1 USB port print server




5V power adapter




Type-c data cable

1 Status Indication

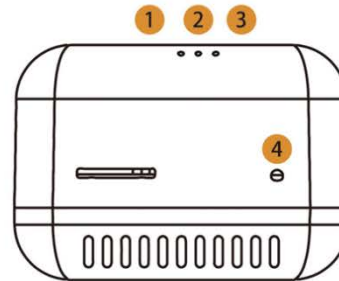

1. Power supply
2. USB connection
3. Internet connection
4. Reset button

Interface Description

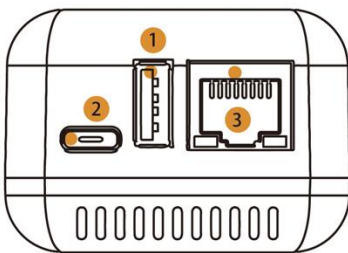

1. USB port for printer connection
2. Power/Config port
3. RJ45 port

2 Config Tool Download



Scan QR code to download device config tool and user manual

Download link: <https://loyalty-secutech.com/print-server-data-download/>

3 Config Tool Interface (Wired)

Wired Network Config: The print server connects to internet via RJ45 Cable

Print Server Config Tool

LOYALTY-SECU
make print sharing easy and free

Info Device Parameter **Network Config** Firmware Upgrade Reboot

Wired/WiFi Network Config

Wired Network Config

Obtain an IP Address: Fixed IP Address

IP Addr:

Subnet Mask:

Gateway:

DNS Addr:

192.168.0.123 Via Network Connection ProductID:WN01-20210712002 WIN64

4 Config Tool Interface (WiFi)

WiFi Network Config: The print server connects to internet via WiFi hotspot

Print Server Config Tool

LOYALTY-SECU
make print sharing easy and free

Info Device Parameter **Network Config** Firmware Upgrade Reboot

Wired/WiFi Network Config

WiFi Network Config

Choose Available WiFi Internet:

WiFi Password:

Obtain an IP Address: Fixed IP Address

IP Addr:

Subnet Mask:

Gateway:

DNS Addr:

192.168.0.123 Via Network Connection ProductID:WN01-20210712002 WIN64

5 Computer Printing (Win/Mac)

Support Print Server config via Windows OS only

Windows98/XP/7/8/10/11



Open config tool to set print server configuration first, add a printer and set a standard TCP/IP port in printer. then explore printing on PC. Port number: 9100

6 APP Download (Android)



Download the "PrinterShare" or "PrintHand" APP via Google Play


7 Bluetooth Printing

Use device embedded with Bluetooth



1. Connect Bluetooth Print Server with USB Printer via USB Cable;
2. Power on the Bluetooth Print Server and USB Printer;
3. Obtain the Bluetooth Networking COM Number of the Print Server and Assign It to the USB Printer.

8 Workflow

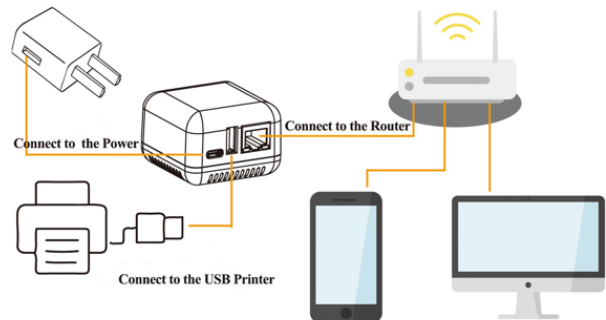

Making Print Sharing Easy and Free!