

 
Quick User Guide

Accessories

Standard accessories



3 USB ports print server




5V power adapter




Type-c data cable

1 Status Indication

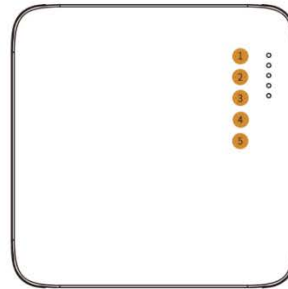


1. Network status
2. Data status
3. Internet connection
4. USB connection
5. Power supply

 Interface Description



 1. Ethernet interface
2. Expansion storage card slot
3. Power/config interface



4. USB interface-01
5. USB interface-02
6. USB interface-03

2 Config Tool Download



Scan QR code to download device config tool and user manual

Download link: <https://loyalty-secutech.com/print-server-data-download/>

3 Config Tool Interface (Wired)

Wired Network Config: The print server connects to internet via RJ45 Cable



Wired Network Config

Obtain an IP Address: Fixed IP Address

IP Addr:

Subnet Mask:

Gateway: 192.168.0.1


DNS Addr: 192.168.0.1

Save

192.168.0.123 Via Network Connection ProductID:WN01-20210712002 WIN64

4 Config Tool Interface (WiFi)

WiFi Network Config: The print server connects to internet via WiFi hotspot

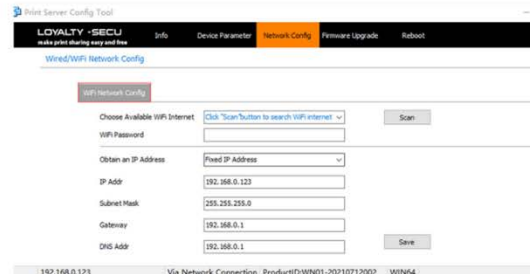

WiFi Network Config

Choose Available WiFi Internet: Click "Scan" button to search WiFi internet

WiFi Password:

Obtain an IP Address: Fixed IP Address

IP Addr: 192.168.0.123

Subnet Mask: 255.255.255.0

Gateway: 192.168.0.1

DNS Addr: 192.168.0.1

Save

192.168.0.123 Via Network Connection ProductID:WN01-20210712002 WIN64

5 Computer Printing (Win/Mac)

Support Print Server config via Windows OS only

Windows98/XP/7/8/10



Open config tool to set print server configuration first, add a printer and set a standard TCP/IP port in printer. then explore printing on PC. Port number: 9100\9101\9102

6 APP Download (Android)



Download the "PrinterShare" or "PrintHand" APP via Google Play


7 Bluetooth Printing

Use device embedded with Bluetooth



1. Connect Bluetooth Print Server with USB Printer via USB Cable;
2. Power on the Bluetooth Print Server and USB Printer;
3. Obtain the Bluetooth Networking COM Number of the Print Server and Assign It to the USB Printer.

8 Workflow

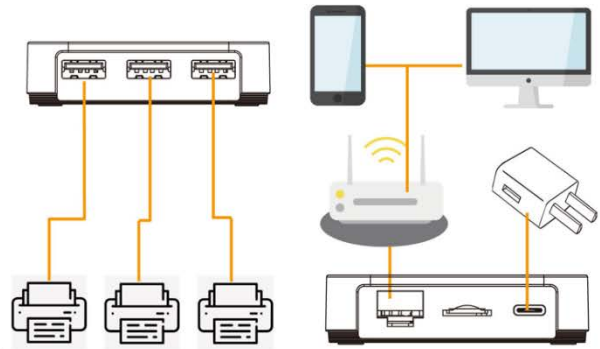

Making Print Sharing Easy and Free!